


PRODUCT INFORMATION

TYPE---2202J





Technical Data	
Working voltage	AC 90V~250V or USB 5V-0.5A
Input/Output voltage	1V~250V
Output type	Passive output
Quiescent Current	<5mA
Max current	10A
RF frequency	433MHz
Working temperature	-30~+80
Receiving Sensitivity	>-97dbm
Amount of storage remote controls	20 pieces
Support encoding	1527 Learning code, 2262 fixed code
RF Operating mode	ASK superheterodyne wireless reception
Receiving range	Open space is more than 50 meters
Remote operating mode (Scan the QR code on the cover for details)	Momentary Mode/ Toggle Mode /Latched Mode/Mix Mode/Motor Toggle Mode

PRODUCT DETAIL

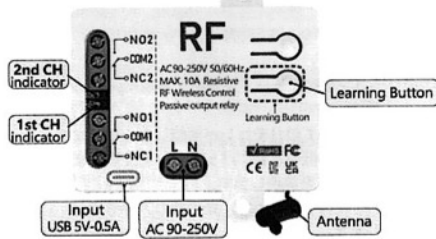

NO: Normally open pin
COM: Common pin
NC: Normally closed pin ①

WIRING DIAGRAM

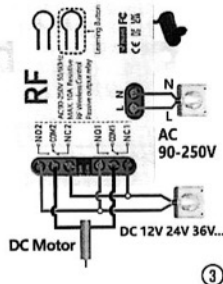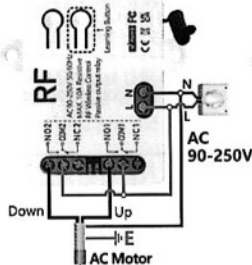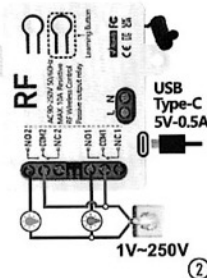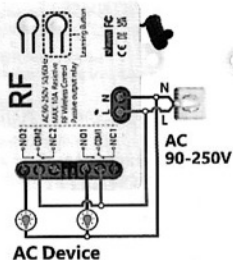

PRODUCT MANUAL



Work volts: AC 90~250V
Max current: 10 Amp



Video Tutorial
Scan the QR code to enter the tutorial video of the settings



<https://youtu.be/e4qbQ50eaYU>

RELAY REMOTE CONTROL SWITCH

Note!

- Notice: Signal pairing is required before use.
- Achtung: Vor der Verwendung ist eine Signalaarung erforderlich.
- Attention : Un appairage de signal est nécessaire avant utilisation.
- Внимание: перед использованием необходимо выполнить сопряжение сигналов.
- Attenzione: È necessario eseguire l'abbinamento del segnale prima dell'uso.
- Atenção: É necessário fazer o pareamento de sinal antes do uso.
- Atención: Se requiere emparejamiento de señales antes del uso.
- 주의: 사용 전에 신호 페어링을 해야 합니다.

WhatsApp: +86 181 3880 5271 / +86 135 0227 8583

Email : dieselectronic@163.com



● Momentary Mode:

1. Press and hold button "A", relay "1" will turn on;
2. Release the button "A", this relay "1" will turn off.

Set up

1. Press the learning button (on the receiver) 1 time.
Wait for 3 seconds;
2. Press button "A" on the remote control. Wait for 3 seconds;
3. Press button "B" on the remote control. Succeed.

● Toggle Mode:

1. Press button "A", relay "1" will turn on;
2. Press button "A" again, this relay "1" will turn off.

Set up

1. Press the learning button (on the receiver) 2 times.
Wait for 3 seconds;
2. Press button "A" on the remote control. Wait for 3 seconds; ④

3. Press button "B" on the remote control. Succeed.

● Latched mode:

1. Press button "A", relay "1" will turn on;
2. Press button "B", relay "2" will turn on, at the same time relay "1" will turn off.

Set up

1. Press the learning button (on the receiver) 3 times.
Wait for 3 seconds;
2. Press button "A" on the remote control. Wait for 3 seconds.
3. Press button "B" on the remote control. Succeed.

● Reset:

Press the learning button (on the receiver) 8 times. succeed.

Notice:

1. Reset before you want to change the operating mode of one remote control.
2. After reset, all the remote controls cannot work anymore.
3. Replace the battery in time when the remote control voltage ⑤

is low. To get the stronger signal transmission.

4. Slightly stretch the antenna on the receiver for better signal reception.
5. The remote control need to have at less 3 or more buttons, if you want to set up latched mode.

● Mode momentané :

1. Appuyez et maintenez enfoncé le bouton "A", le relais "1" s'allumera ;
2. Relâchez le bouton "A", ce relais "1" s'éteindra.

Installation

1. Appuyez sur le bouton d'apprentissage (sur le récepteur) 1 fois. Attendez 3 secondes ;
2. Appuyez sur le bouton "A" de la télécommande.
Attendez 3 secondes ;
3. Appuyez sur le bouton "B" de la télécommande. Réussir.

● Mode bascule :

1. Appuyez sur le bouton "A", le relais "1" s'allumera ; ⑥
2. Appuyez à nouveau sur le bouton "A", ce relais "1" s'éteindra.

Installation

1. Appuyez sur le bouton d'apprentissage (sur le récepteur) 2 fois. Attendez 3 secondes ;
2. Appuyez sur le bouton "A" de la télécommande.
Attendez 3 secondes ;
3. Appuyez sur le bouton "B" de la télécommande. Réussir.

● Mode verrouillé :

1. Appuyez sur le bouton "A", le relais "1" s'allumera ;
2. Appuyez sur le bouton "B", le relais "2" s'allumera, en même temps le relais "1" s'éteindra.

Installation

1. Appuyez 3 fois sur le bouton d'apprentissage (sur le récepteur).
Attendez 3 secondes ;
2. Appuyez sur le bouton "A" de la télécommande. Attendez 3 secondes.
3. Appuyez sur le bouton "B" de la télécommande. Réussir.

- Réinitialiser :** Appuyez 8 fois sur le bouton d'apprentissage (sur le récepteur). réussir. ⑦